


n-LOCK.com




USER MANUAL
HOW TO MOUNT n-LOCK

1 Unscrew the allen screws.

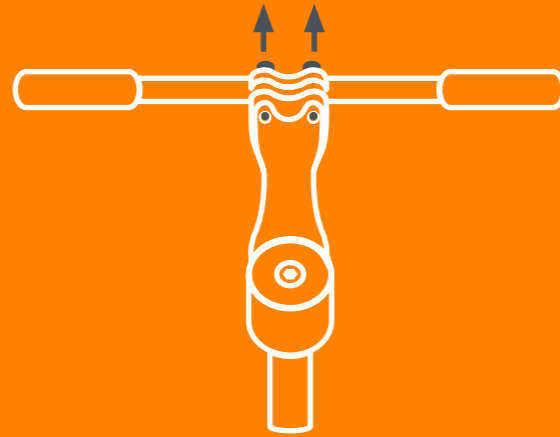



2 Take off your handlebar.

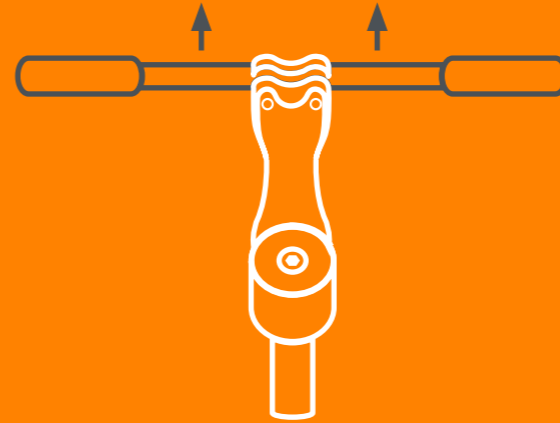


3 Unscrew the top bolt (and any potential clamp).




4 Take off your existing stem.

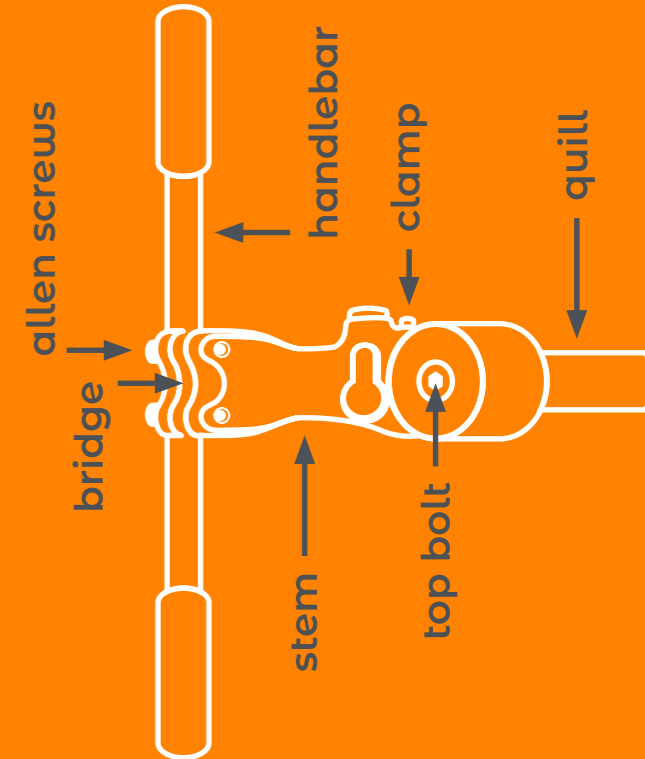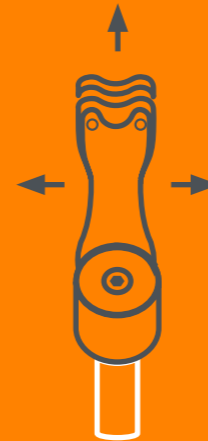

5 Place your n-lock on your quill.

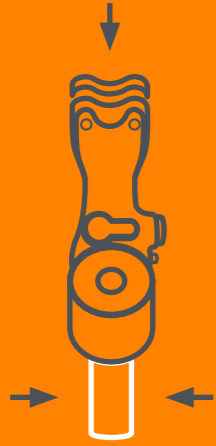

6 Tighten the clamp and the top bolt.

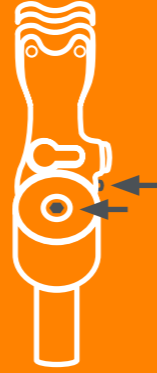

7 Insert the quill in the bicycle. (Perform this step only if you have bought a quill).



8 Tighten the top bolt once again.



9 Unscrew the bridge from the n-lock.



10 Place your handlebar and tighten the screws.

